

MyLocoSound Quick Start Guide



Battery & Track Power made Simple

Operation & Installation Manuals

are available on our website

www.GScaleGraphics.net
Electronics
Manuals & Documents

I hope you enjoy our products. Should you need help, please ask.
e-mail: GScaleGraphics@comcast.net
Phone: 970-581-3567

Del Tapparo

In order to hear ANY sound, you must first ...

- Connect a 4 or 8 ohm speaker to the S1,S2 terminals.
- Connect a battery to the B+,B- terminals (8 to 24VDC).
- Apply a motor voltage greater than zero to the M1,M2 terminals to "wake up" the sound board.
- The LED (next to terminal F1) should be OFF.

You should now be able to change the engine speed via the track/motor voltage.

- Install batteries in your remote. *(if you didn't purchase our remote, program yours for Sony Codes).*

Note: Don't press the Power Button. It does NOT control power. It is used during programming of MyLocoSound.

You should now be able to trigger sounds from the remote. Button 1 = Whistle/Horn, 2 = Bell.

The LED

The LED next to terminal F1 will always be **OFF in Run Mode**.

Mute button enters Sound Programming Mode. The LED will now be flashing slowly and sound will be muted. See the full instructions for programming options.

Enter button enters Operating Programming Mode. The LED will now be flashing faster and sound will be muted. See the full instructions for programming options.

While in either mode, you can use the number buttons to change the options. Each button controls a different feature. Pressing a button will produce a number of beeps indicating which option is active. Keep pressing the button until you get the option you want, then press Mute or Enter to save the change and get back in run mode.

MyLocoSound Quick Start Guide



Battery & Track Power made Simple

Operation & Installation Manuals

are available on our website

www.GScaleGraphics.net
Electronics
Manuals & Documents

I hope you enjoy our products. Should you need help, please ask.
e-mail: GScaleGraphics@comcast.net
Phone: 970-581-3567

Del Tapparo

In order to hear ANY sound, you must first ...

- Connect a 4 or 8 ohm speaker to the S1,S2 terminals.
- Connect a battery to the B+,B- terminals (8 to 24VDC).
- Apply a motor voltage greater than zero to the M1,M2 terminals to "wake up" the sound board.
- The LED (next to terminal F1) should be OFF.

You should now be able to change the engine speed via the track/motor voltage.

- Install batteries in your remote. *(if you didn't purchase our remote, program yours for Sony Codes).*

Note: Don't press the Power Button. It does NOT control power. It is used during programming of MyLocoSound.

You should now be able to trigger sounds from the remote. Button 1 = Whistle/Horn, 2 = Bell.

The LED

The LED next to terminal F1 will always be **OFF in Run Mode**.

Mute button enters Sound Programming Mode. The LED will now be flashing slowly and sound will be muted. See the full instructions for programming options.

Enter button enters Operating Programming Mode. The LED will now be flashing faster and sound will be muted. See the full instructions for programming options.

While in either mode, you can use the number buttons to change the options. Each button controls a different feature. Pressing a button will produce a number of beeps indicating which option is active. Keep pressing the button until you get the option you want, then press Mute or Enter to save the change and get back in run mode.