

MyLocoSound Universal Sound Card

IR Remote Buttons	Soundcard Terminals	Steam (Rev 14) *	Diesel (Rev 12) *
Power		Start Voltage for Chuff	Start Voltage for Rev Up
VOL up/dwn		Change Volume of active sound	Change Volume of active sound
CH up/dwn		Change Sound	Change Sound
		Whistle Tone with button 1 on	Horn Tone with button 1 on
		Engine Chuff Speed	Engine Idle
			Engine Run Speed
Mute		Sound on/off	Sound on/off
Button 1	F1	Whistle (Note 1)	Horn (Note 1)
Button 2	F2	Bell on/off	Secondary Horn/Bell
Button 3	F3	All Aboard (U.S.) Guard's Whistle (Non U.S.)	All Aboard (U.S.) Guard's Whistle (Non U.S.)
Button 4	F4	Safety Valve on/off	Air Brake
Button 5	F5	Brake Pump on/off	Turbocharger on/off
Button 6		Button 6 - Control Mode	Button 6 - Control Mode
		1 Manual	1 Manual
		2 Auto Whistle every 20 secs	2 Auto Horn every 20 secs
		3 Auto Signals & Track Magnets	3 Signals & Track Magnets (U.S.)
		4 Auto Safety valve,brake pump,bell	
Button 7		Button 7 - Number of Cylinders	Button 7 - Engine Type
		1 2 or 4 Cylinder (4 chuffs per rev.)	1 Light Diesel
		2 3 Cylinder (6 chuffs per rev.)	2 Heavy Diesel
			3 Diesel Mech w/ gear change
			4 Diesel Electric
Button 8		Button 8 - Load sensitivity 1 to 5, Default=2	Button 8 - Load sensitivity
		1 Max (Louder w/ small speed change)	1 Max (Louder w/ small speed change)
		5 Min (Louder w/ large speed change)	5 Min (Louder w/ large speed change)
Button 9		Button 9 - Whistle Type (Note 2)	Button 9 - Horn/Bell
		1 British Whistle 1	1 Primary two tone horn on F1 Secondary two tone on F2
		2 British Whistle 2	2 horn 2 on F1 Bell F2 (6-1,2 Latched, 6-3 Timed)
		3 British Whistle 3	3 horn 3 on F1 Bell F2 (6-1,2 Latched, 6-3 Timed)
		4 British Stanier Hooter	
		5 Thomas Whistle	
		6 Three chime whistle	
		7 Six chime whistle with full entry	
		8 Six chime whistle w/ ramped entry	
Button 0		Button 0 - Chuff Mode	Button 0 - Not Used
		1 Voltage triggered chuff	
		2 Switch/Wheel trigger by F7	
	F6	Not used	Not used
	F7	Chuff Sync Switch input	Not used
Button 3		Reset to Default Settings: Hold Button 3 for two or more seconds, until beep	

Notes:

- * **Option indicated by number of beeps after pressing button**
- 1 Momentary from F1, Latched from Button 1 to allow volume change
- 2 Playable: Whistle sounds as long as F1 is closed.
In Button 6, 3 beep mode, plays crossing signal while running.

