

## BrightStar BR100B Universal Remote

Setup for use with

**MyLocoSound Universal Sound Cards**

Install 2 AA batteries

**This remote should be preprogrammed for use with your MyLocoSound card upon receipt. In the event it is not ...**

### Programming the Remote

- Hold the Setup button and hold until the LED turns ON. \*
- Key in 6 0 5 and the LED should turn OFF.

Power up the MyLocoSound board and test.


Pressing button 1 should sound the horn or whistle.

Notes:

Programming should be retained after battery removal or replacement.

\* If no LED with setup button, you probably need to stretch out the positive battery spring contacts a bit.

*Any TV remote programmed for Sony codes can be used with MyLocoSound boards. Consult the instructions for your specific remote.*

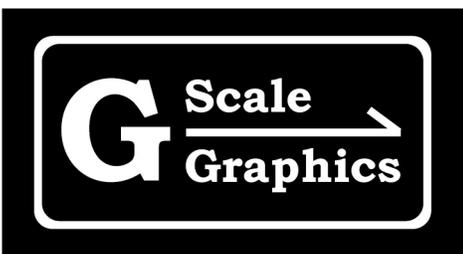

[www.GScaleGraphics.net](http://www.GScaleGraphics.net)

## RCA Universal Remote RCRH02BR

Setup for use with  
**MyLocoSound Universal Sound Cards**

### Install 2 AAA batteries

Push down **hard** on the end of the door closest to the middle of the remote to release the latch. Then slide the door toward the end of the remote.

Note: There may be a screw holding the door closed.

### Programming the Remote

- Hold the Code Search button and hold until the LED turns ON
- Press TV, then enter 0001 (LED should turn OFF).
- Hold the Code Search button and hold until the LED turns ON
- Press SAT, then enter 0639 (LED should turn OFF).


Power up the MyLocoSound board and test.

Pressing button 1 should sound the horn or whistle.

Note:

Removing the batteries from this remote will require it to be reprogrammed.  
So save these instructions.

*Any TV remote programmed for Sony codes can be used with My-  
LocoSound boards. Consult the instructions for your specific remote.*

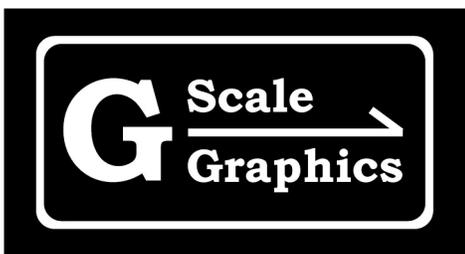

[www.GScaleGraphics.net](http://www.GScaleGraphics.net)